

Design: Tim Tsai


Design Version 3

https://rebrickable.com/users/RDE260/mocs/

1

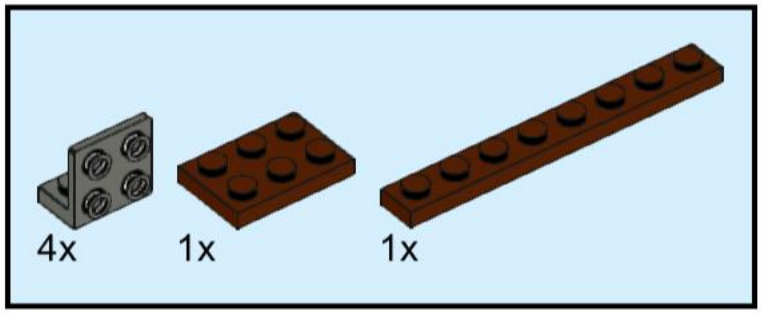

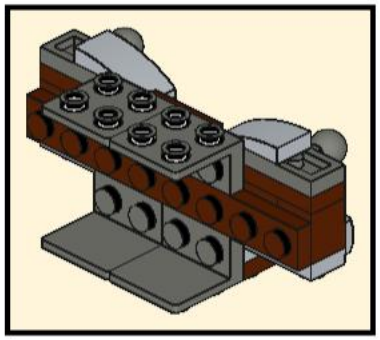


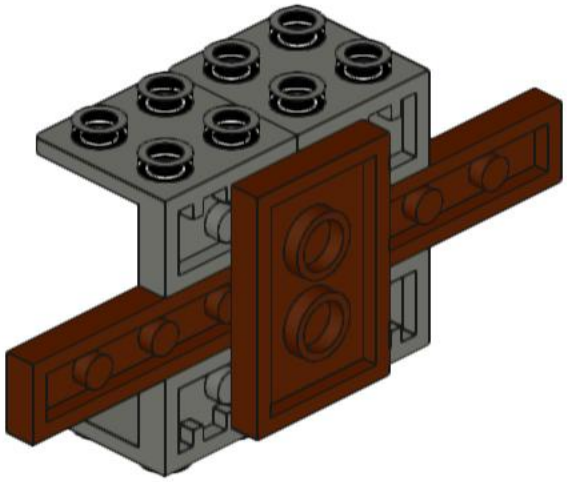


Before starting this assembly, remove and dismantle the original deflector array


Note: All "reddish brown" colored pieces can be replaced with any other color


2

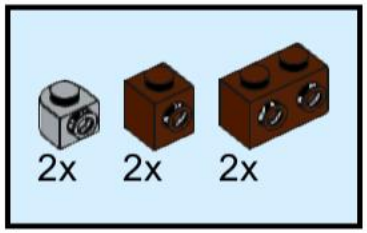

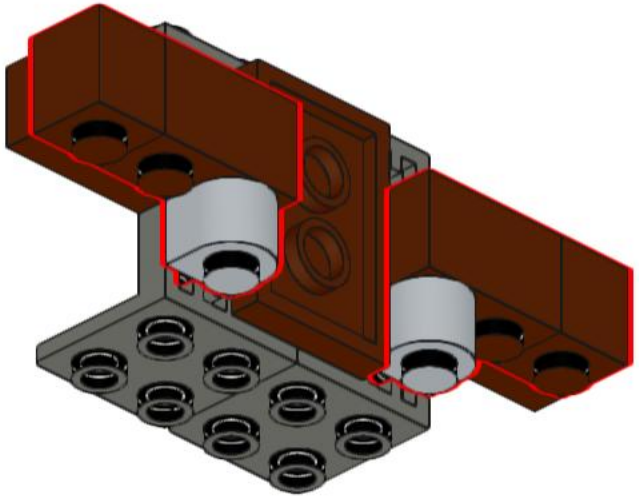



3

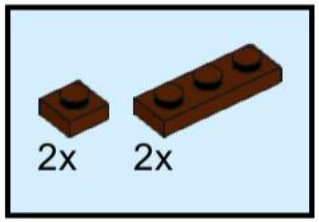

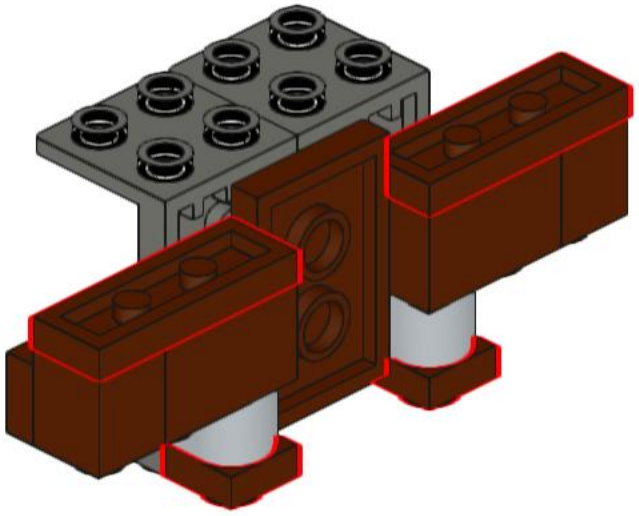


4

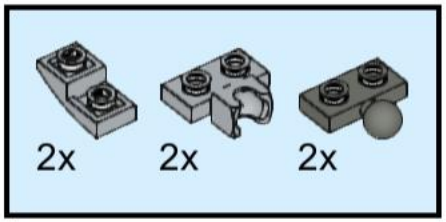


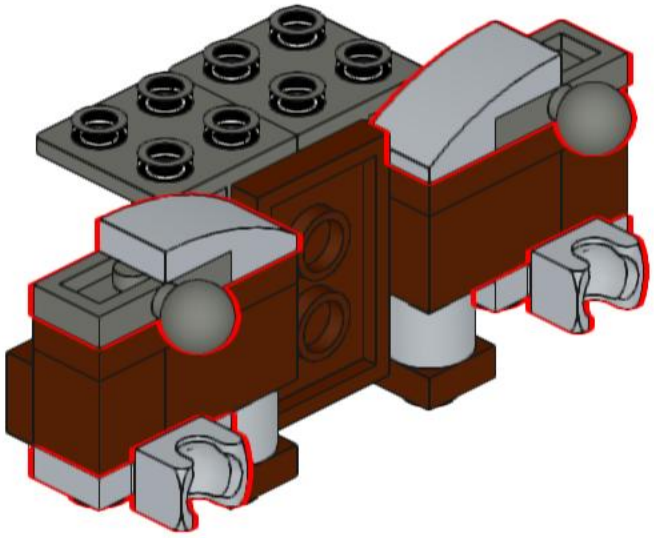



5

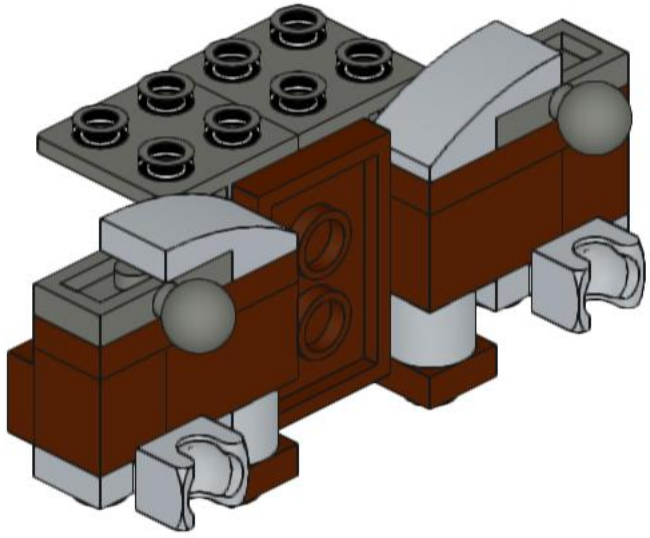


6

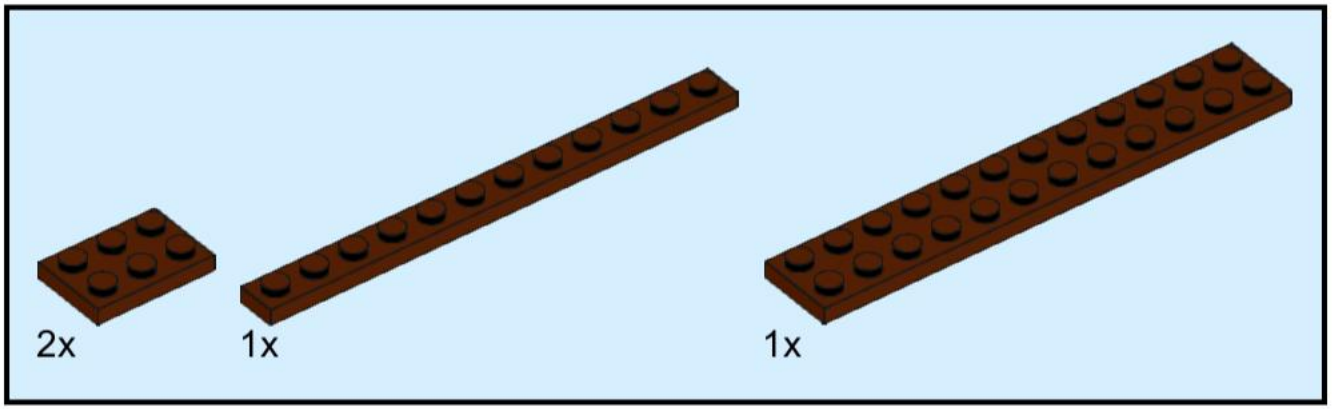


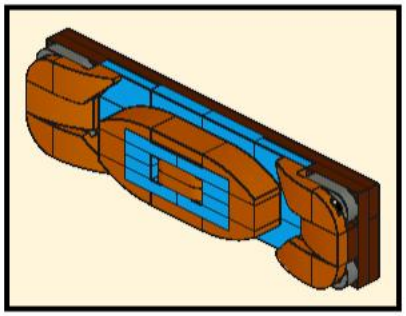

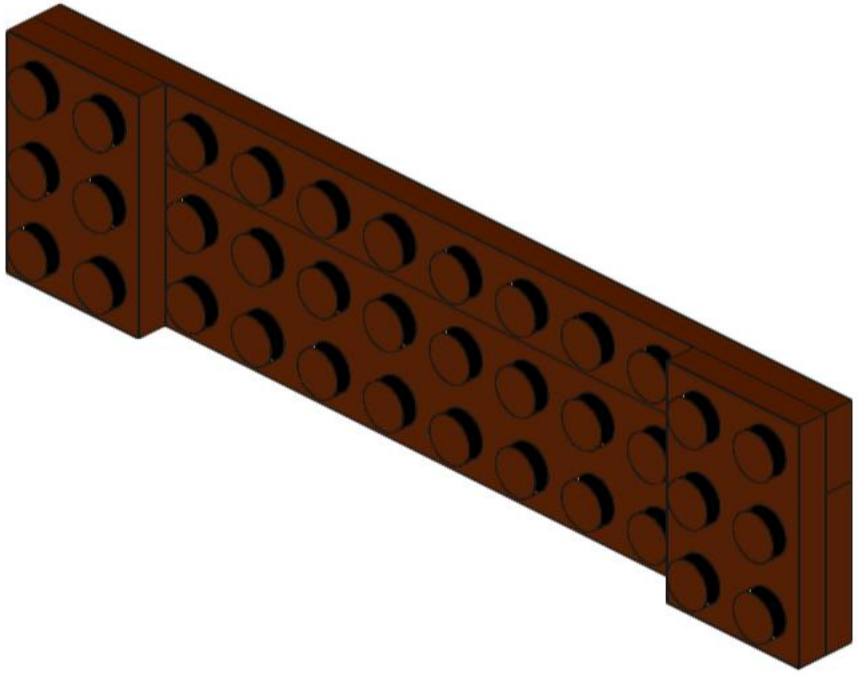



7

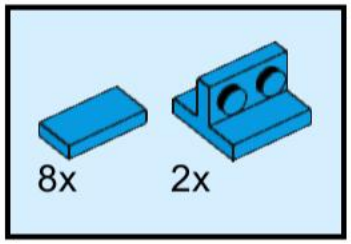

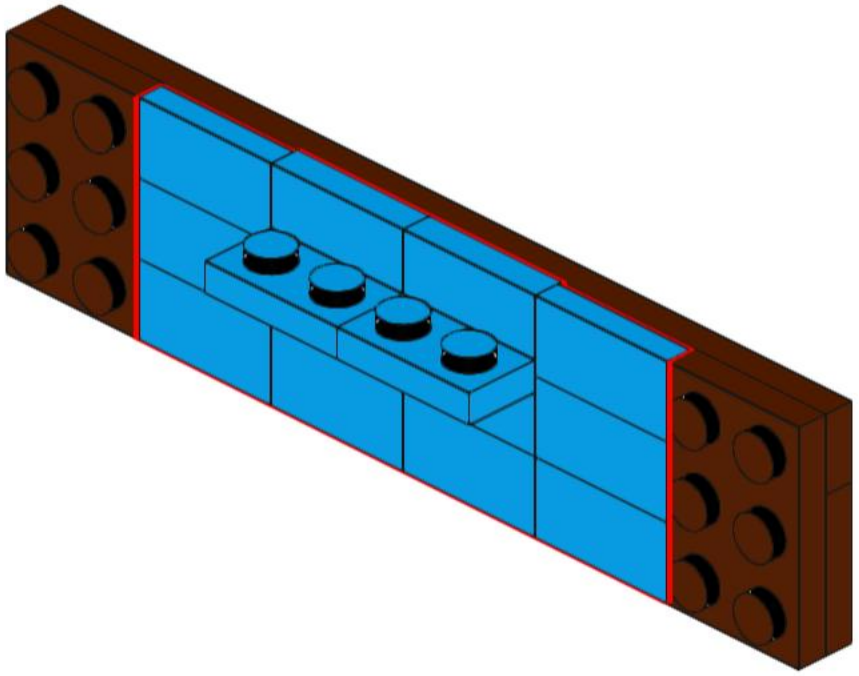



8

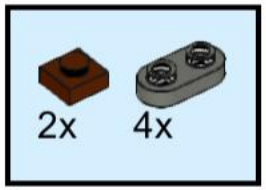

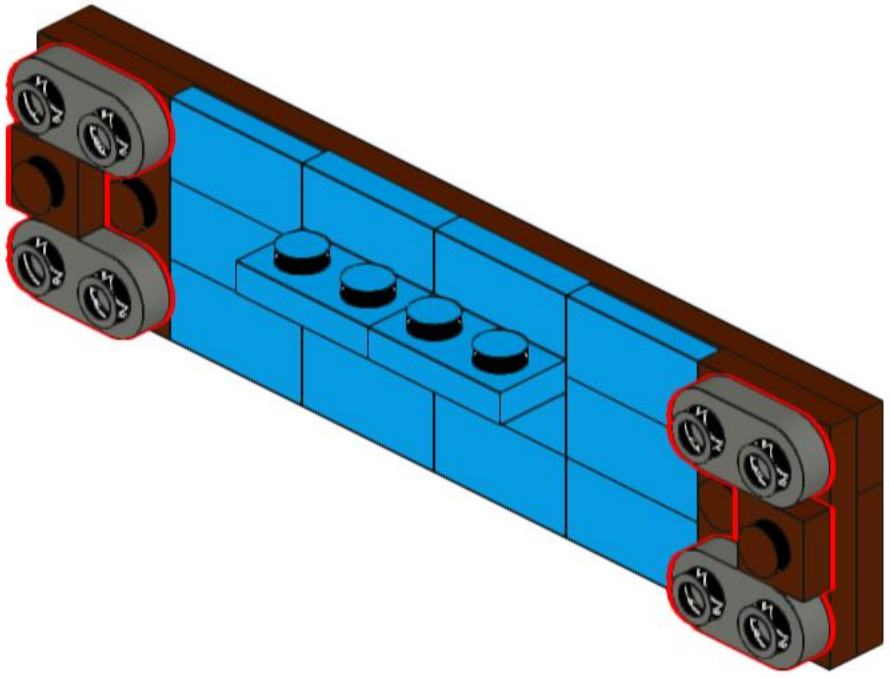



9

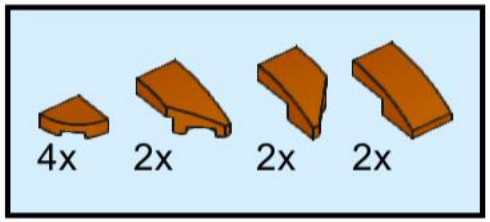

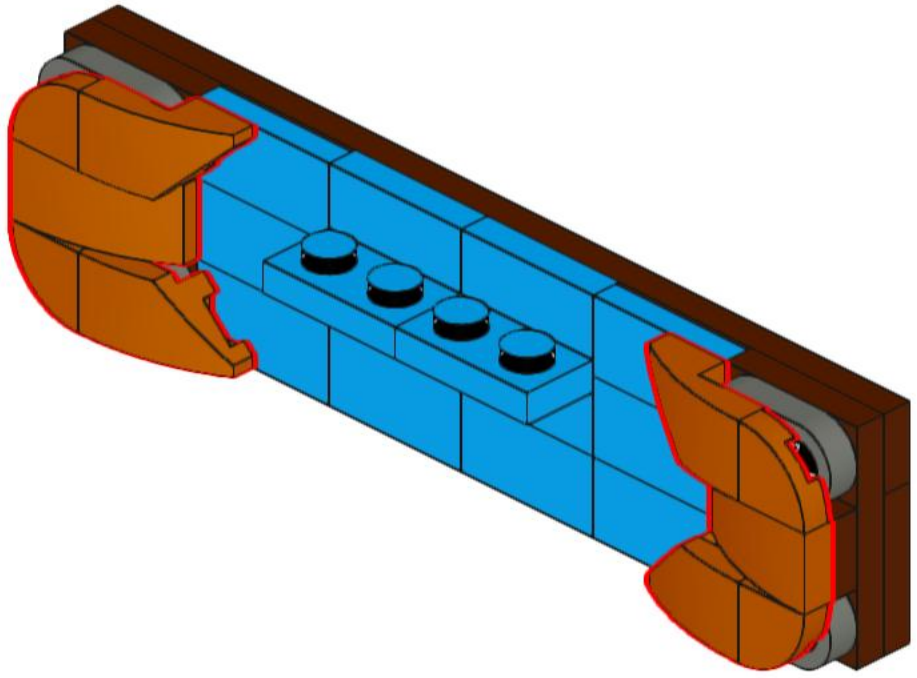



10

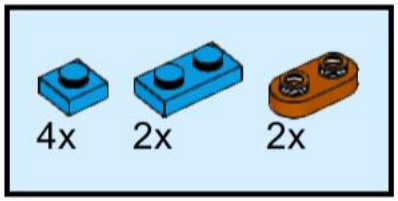

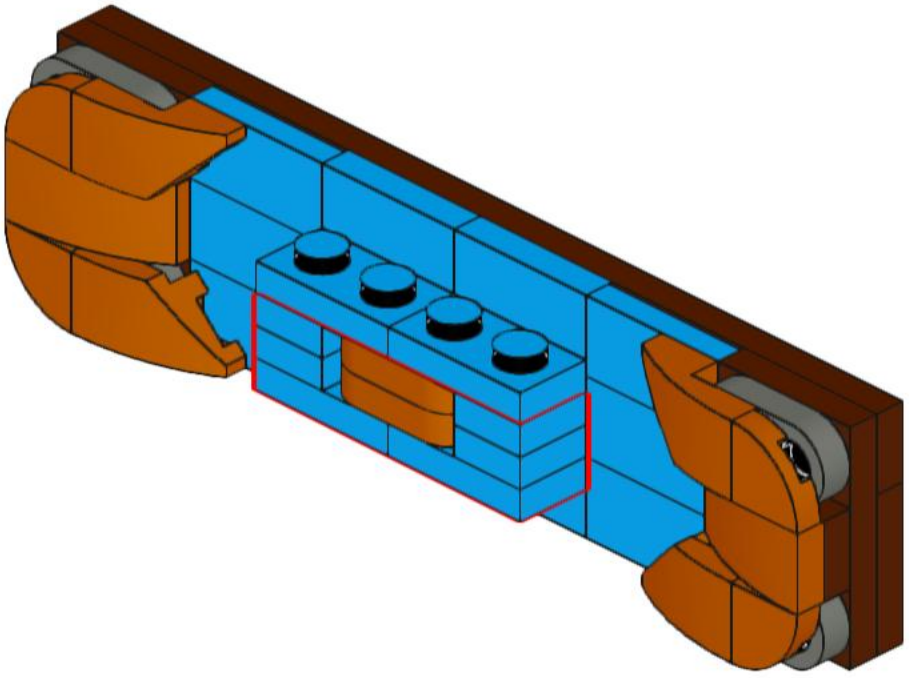


11

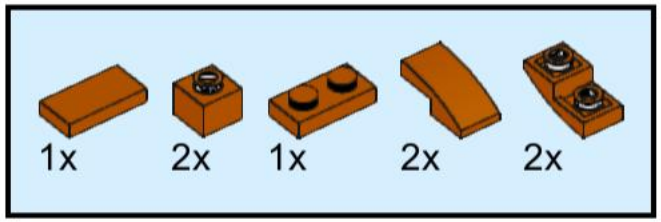


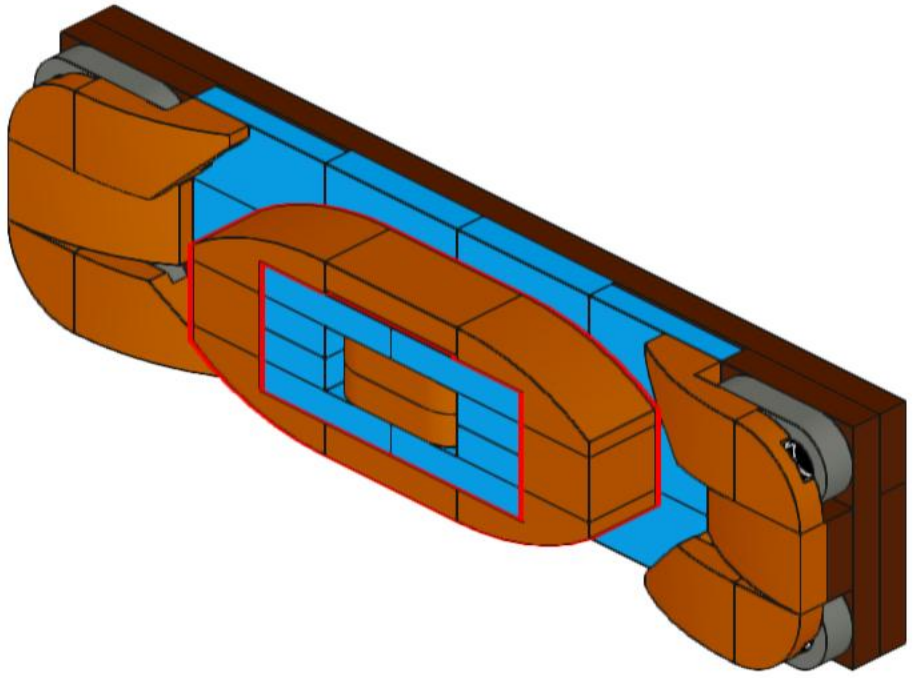


12

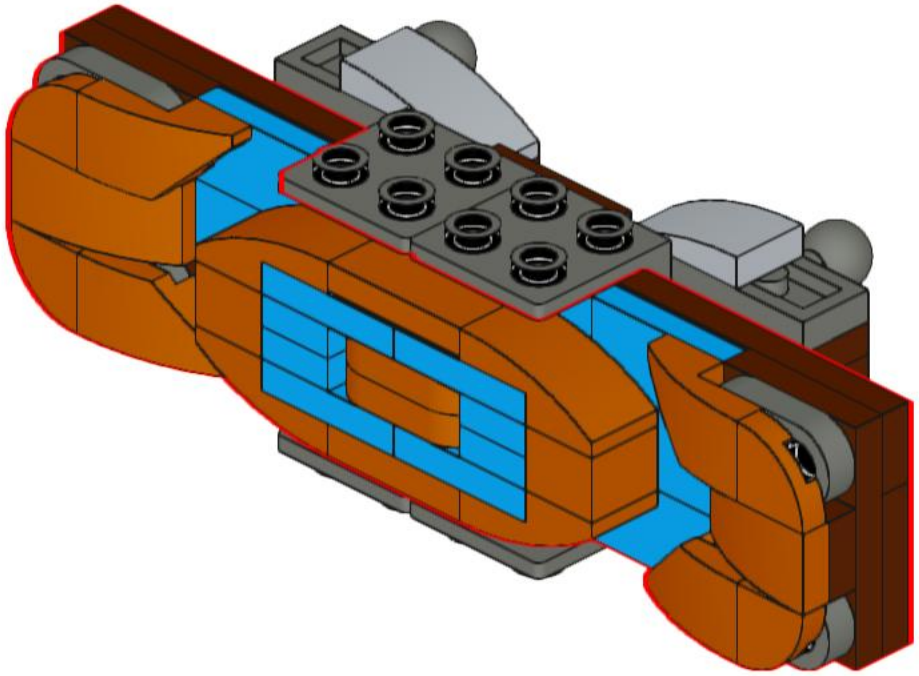



13

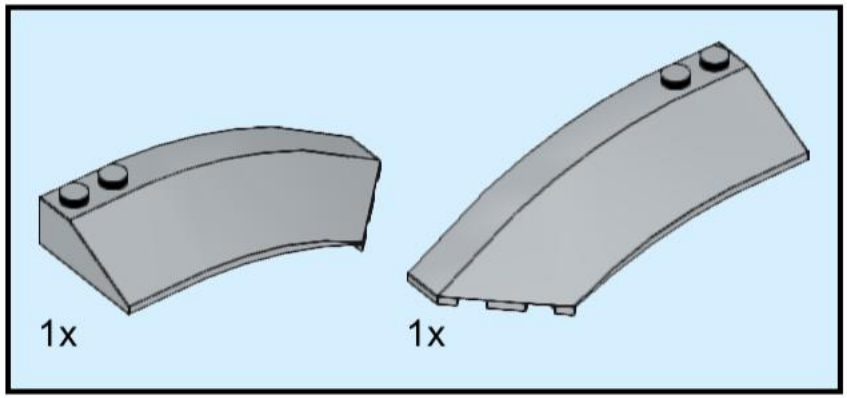

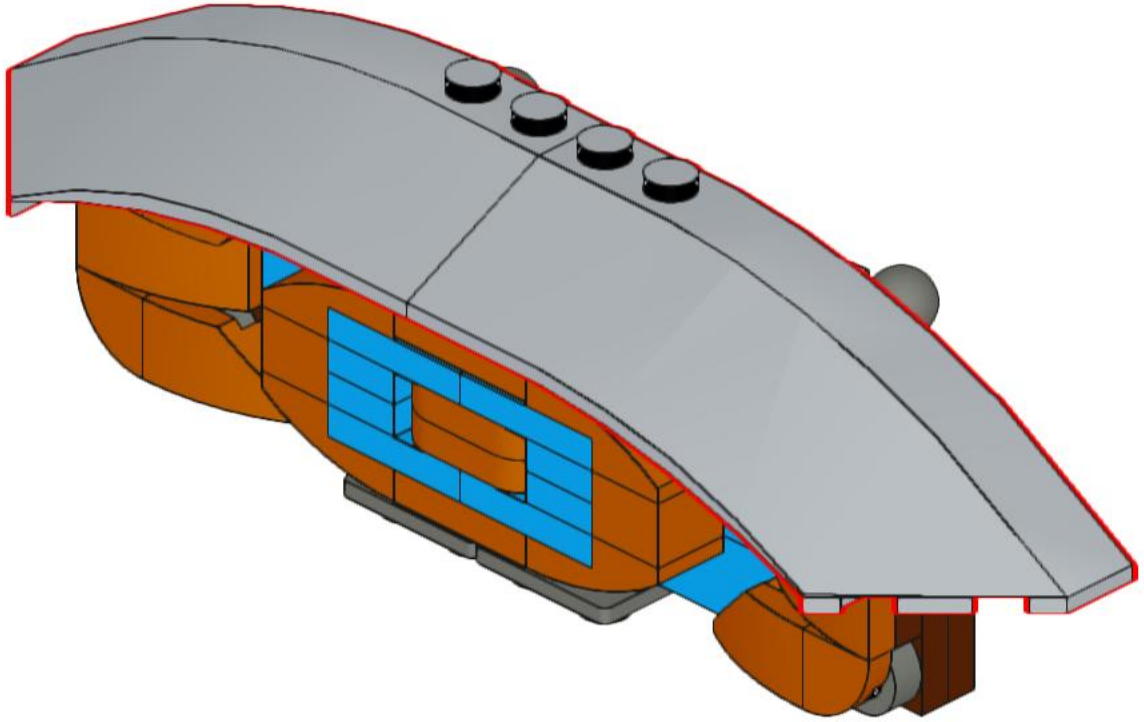


14

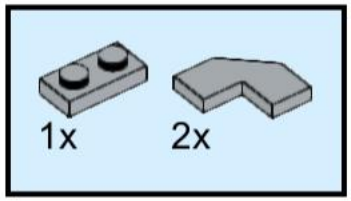


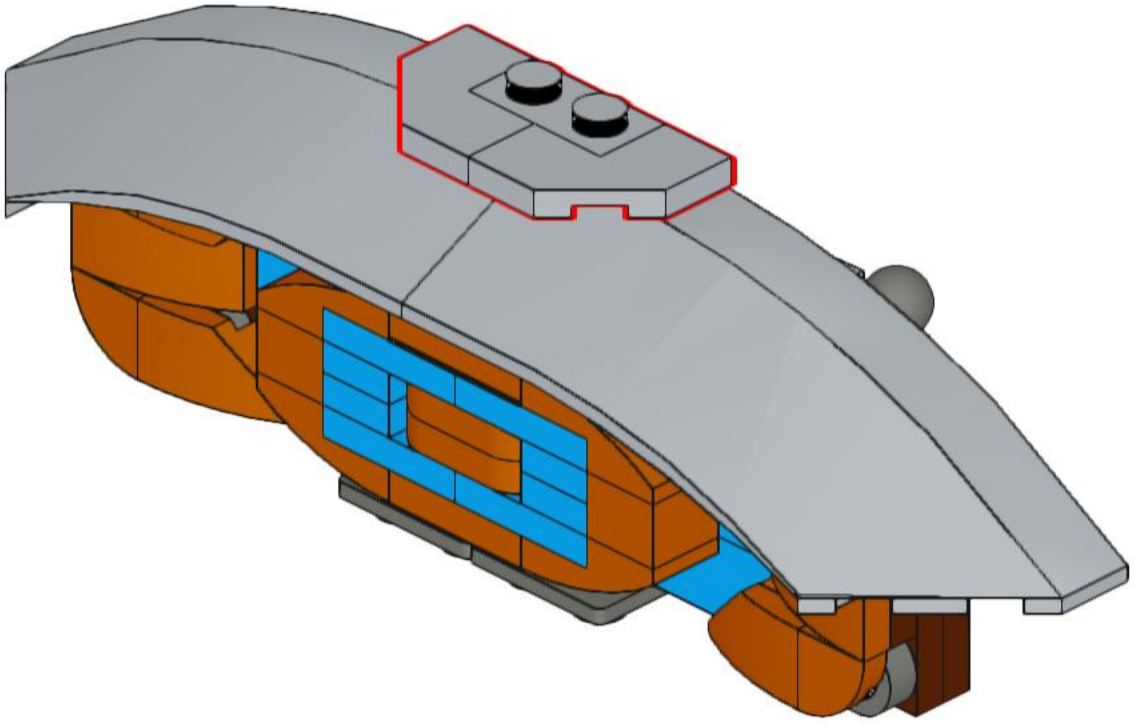


Attach this completed assembly to the hull, as shown in page 148 of instruction book #1


15

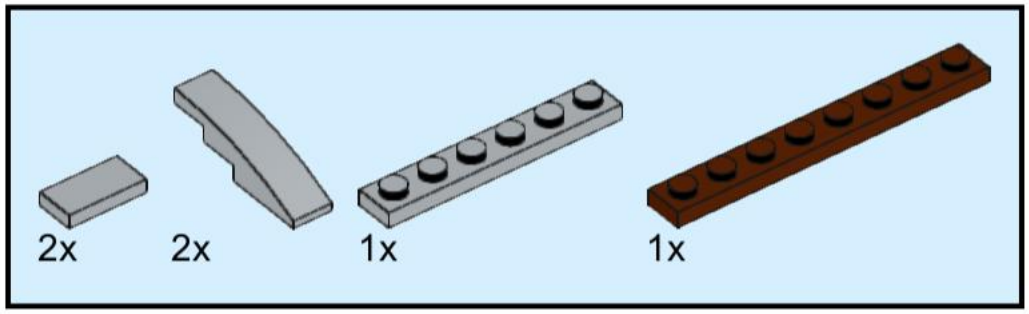


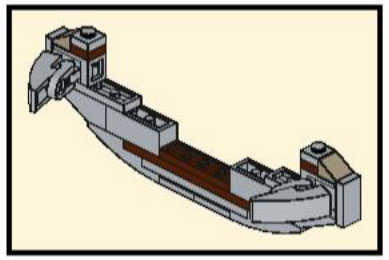

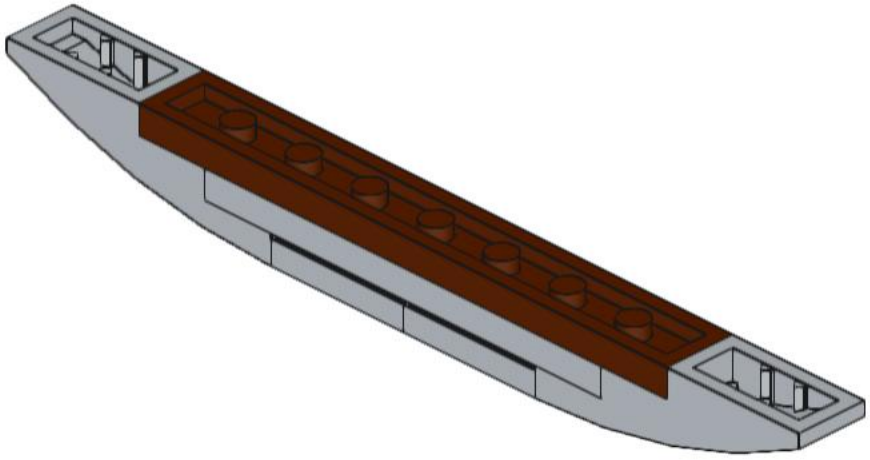



16

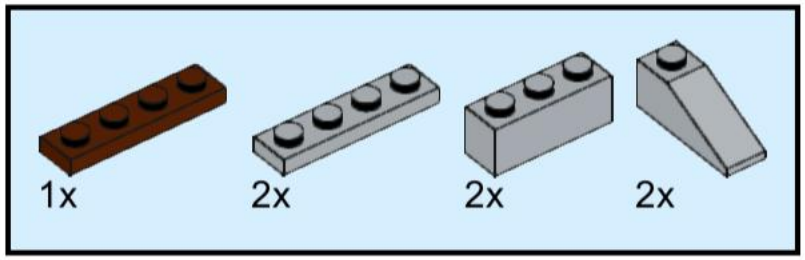


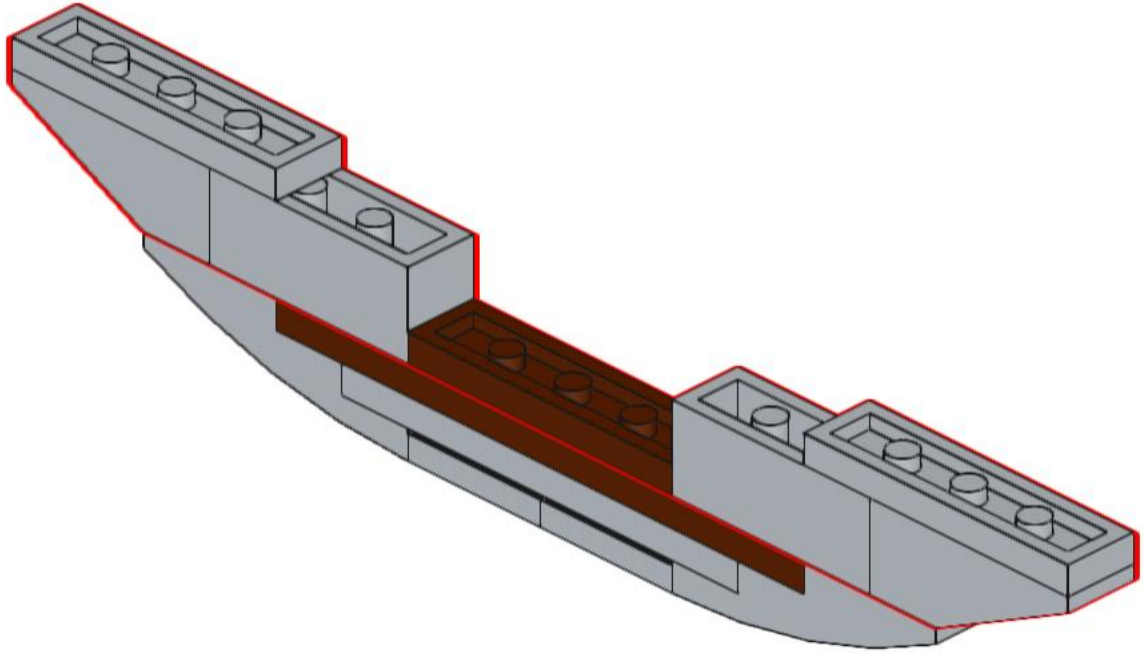


17

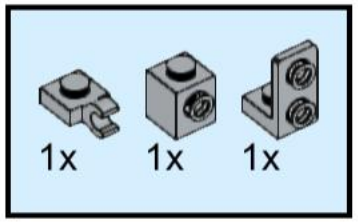


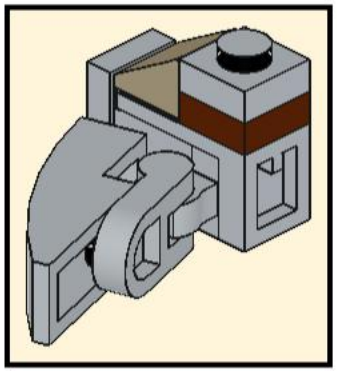

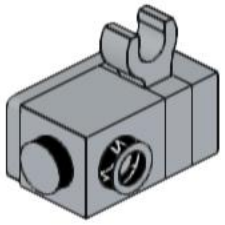



18

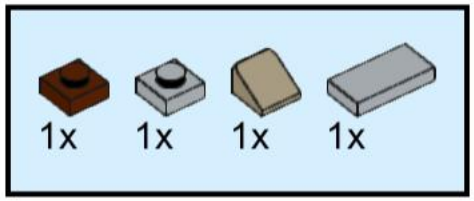

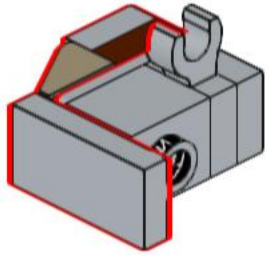


19

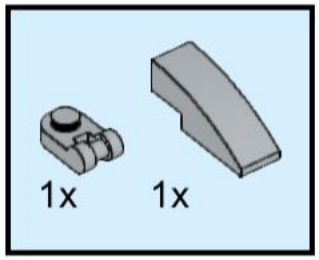


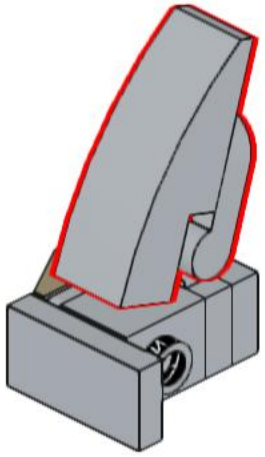



20

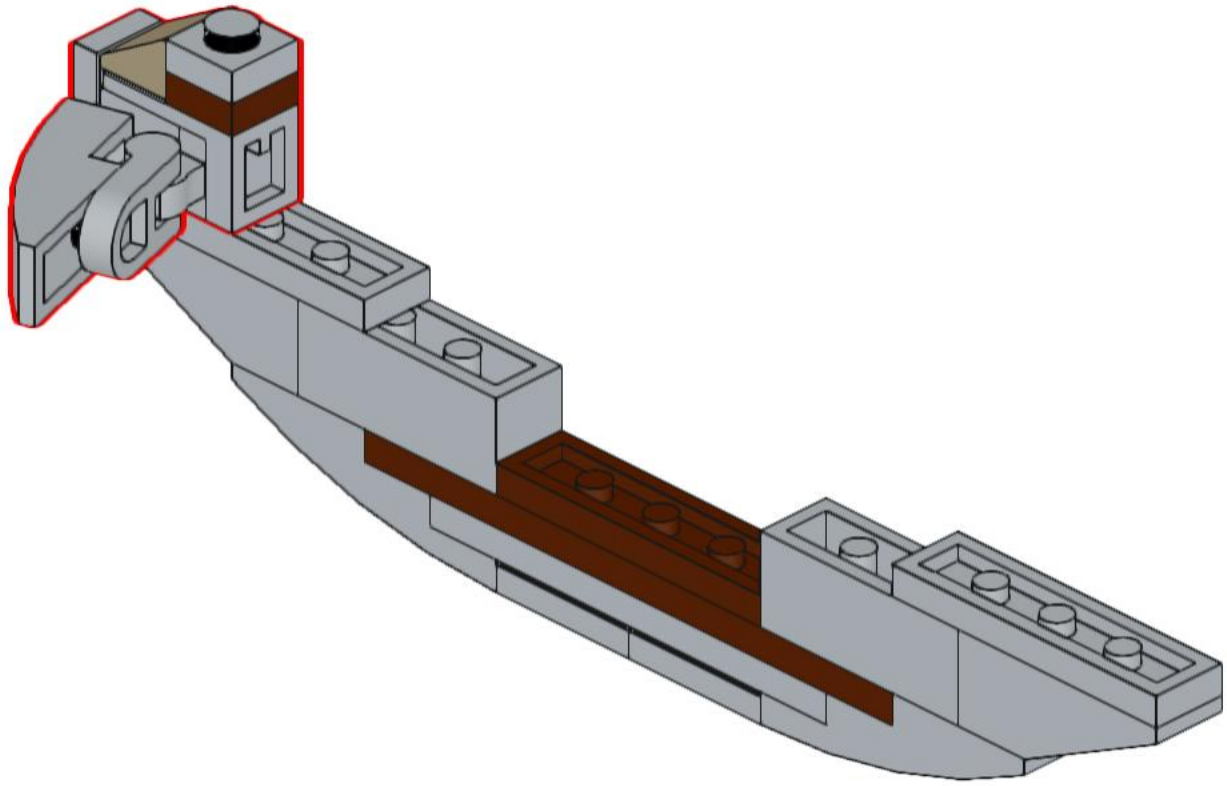


21

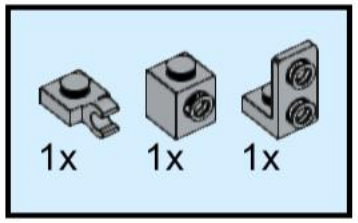


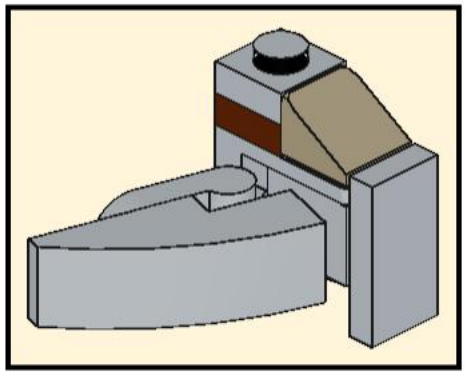

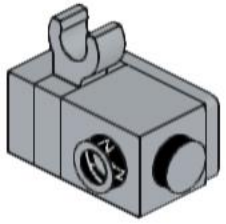



22

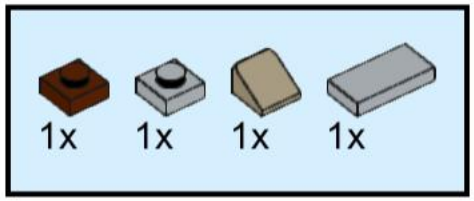

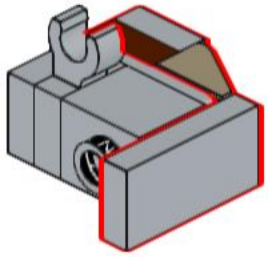


23

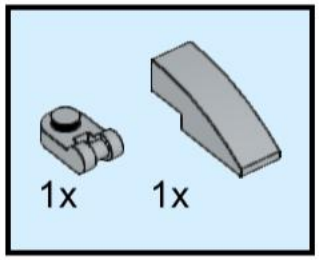


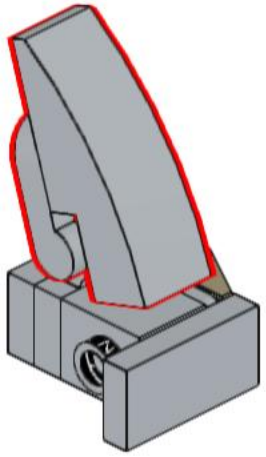


24

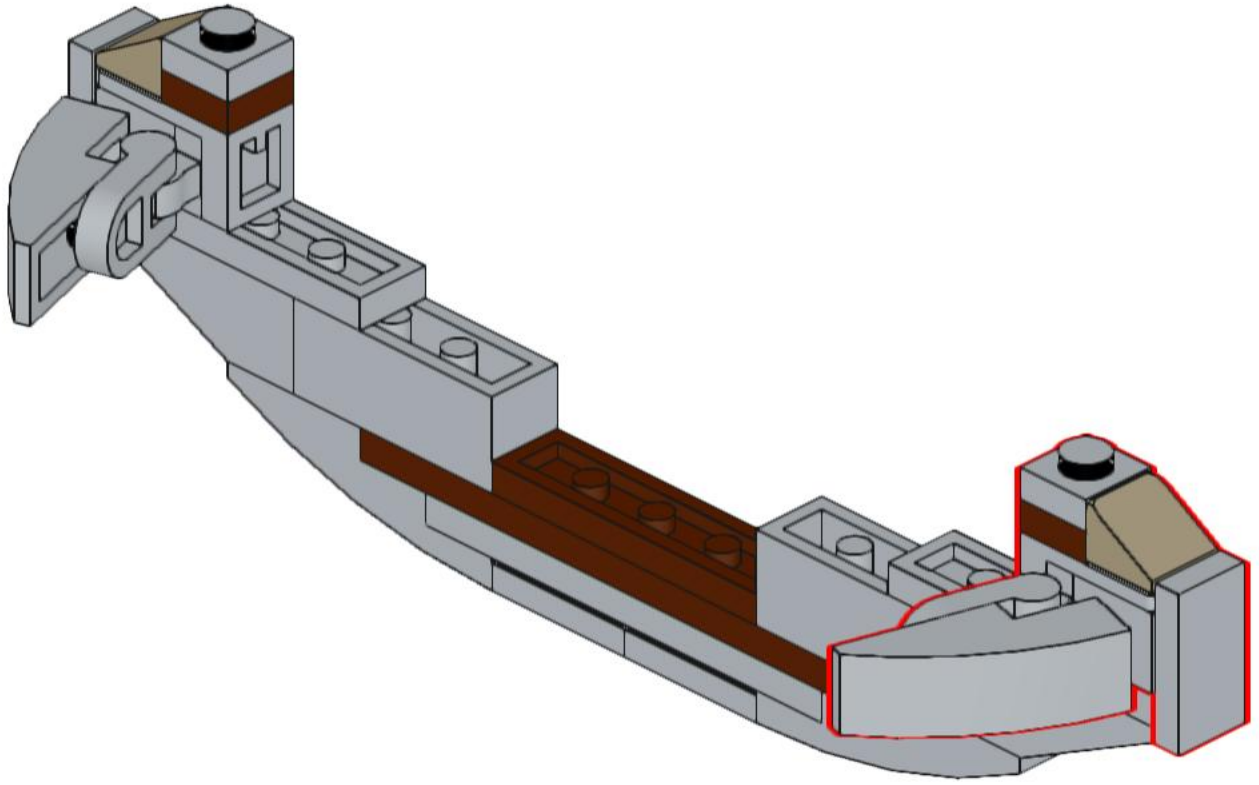


25

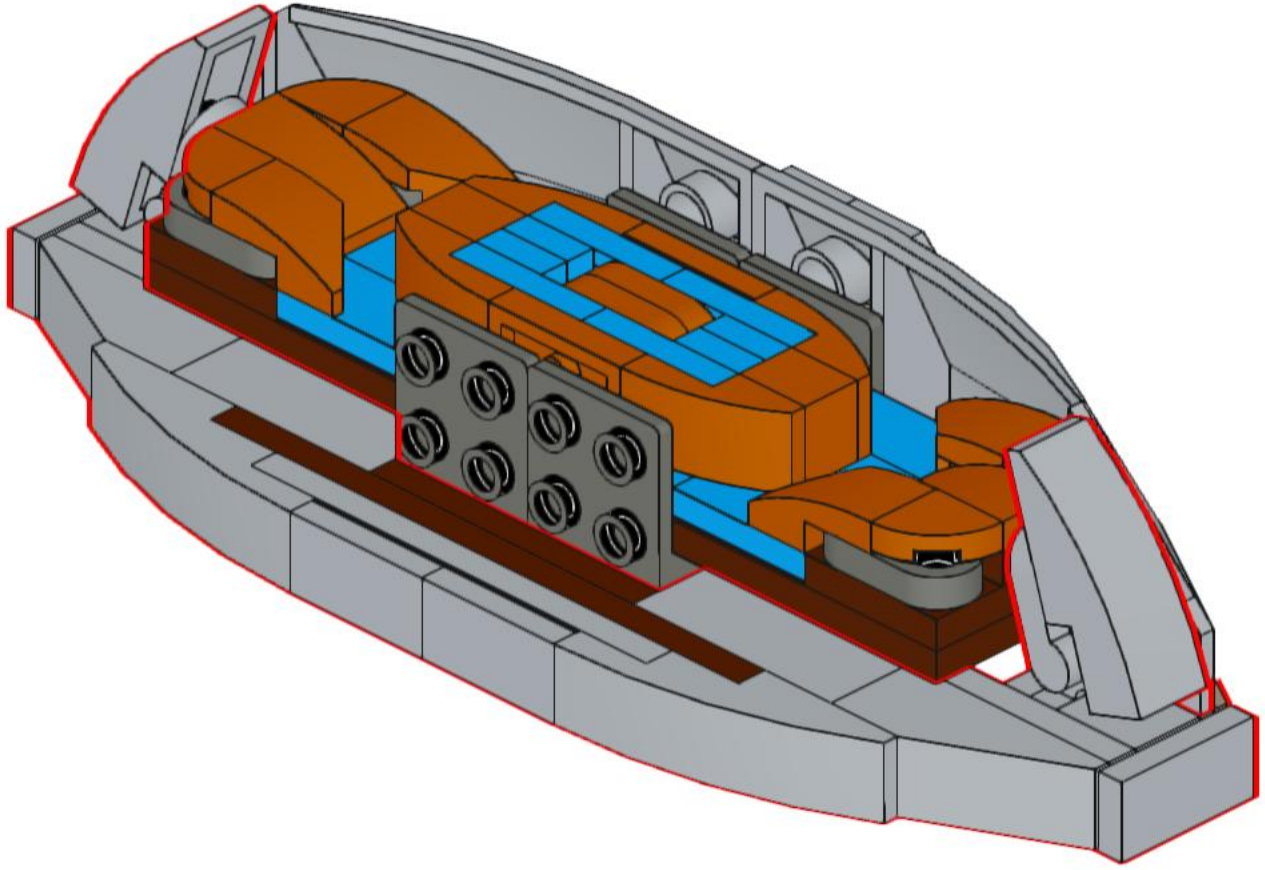

26

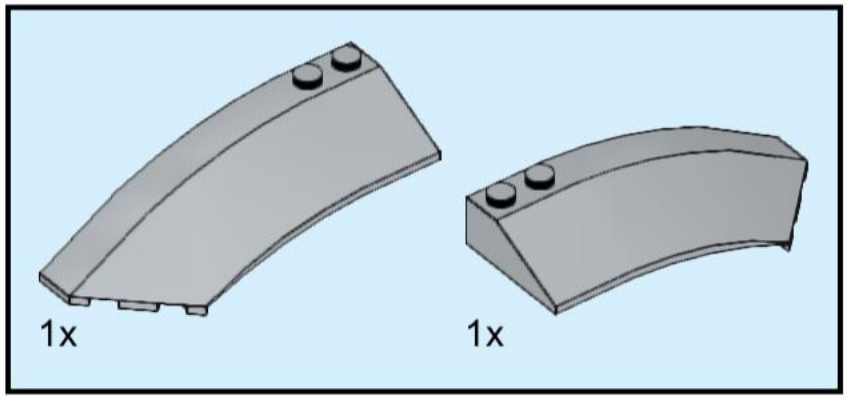

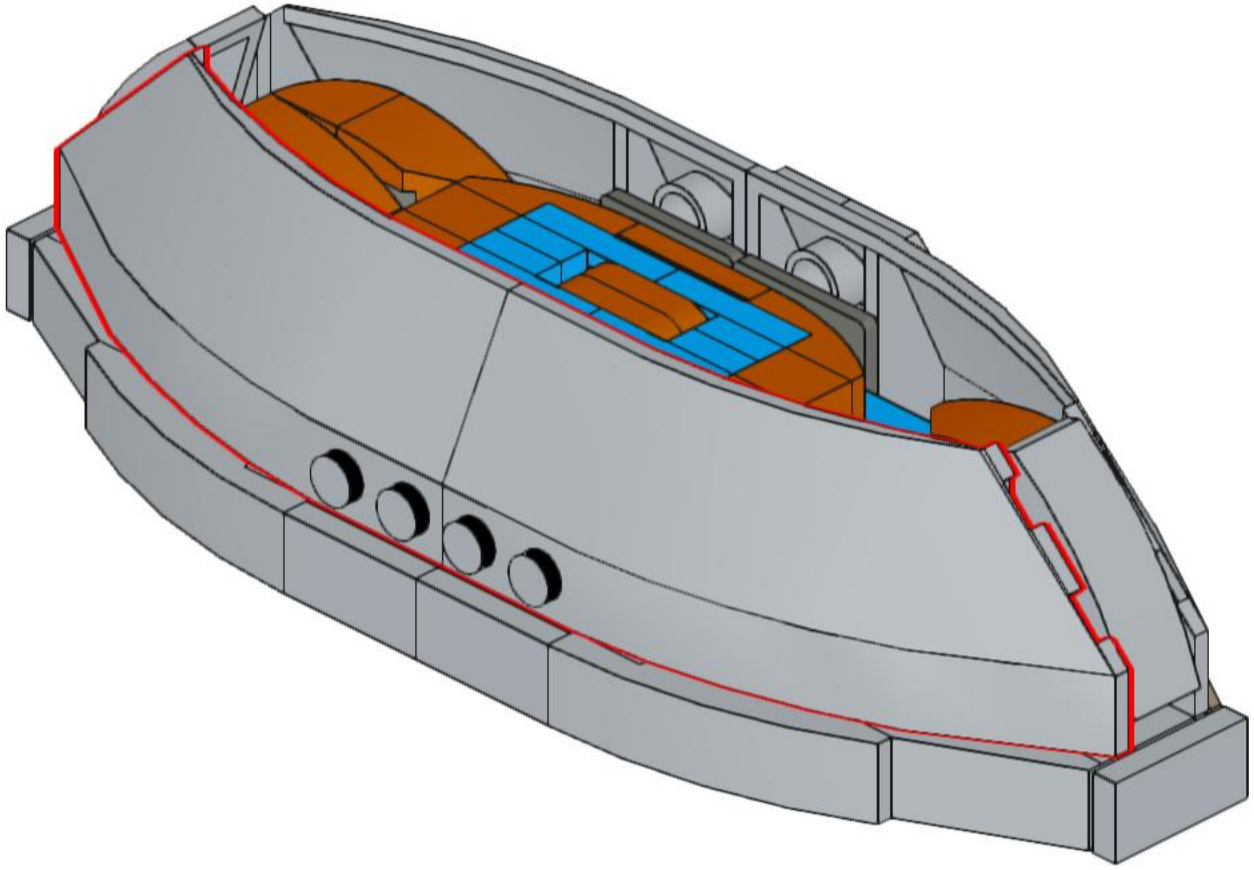




4x
35480
Dark Bluish Gray



2x
14417
Dark Bluish Gray

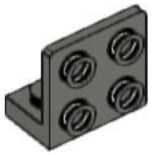


4x
99207
Dark Bluish Gray



2x
3024
Light Bluish Gray



2x
3386
Light Bluish Gray




2x
61252
Light Bluish Gray




2x
26047
Light Bluish Gray




2x
87087
Light Bluish Gray



1x
3023
Light Bluish Gray




4x
3069
Light Bluish Gray

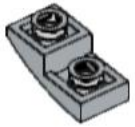


2x
24201
Light Bluish Gray




2x
73825
Light Bluish Gray

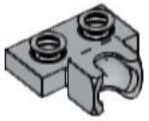


2x
14704
Light Bluish Gray




2x
27263
Light Bluish Gray

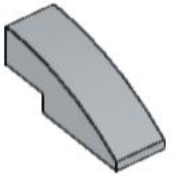


2x
50950
Light Bluish Gray

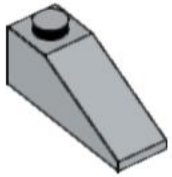


2x
4286
Light Bluish Gray

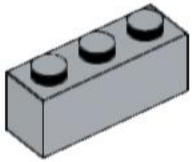


2x
3622
Light Bluish Gray

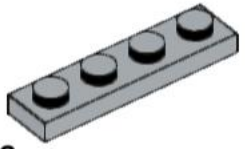


2x
3710
Light Bluish Gray

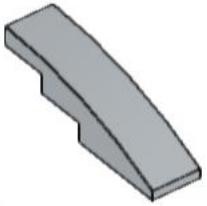


2x
61678
Light Bluish Gray

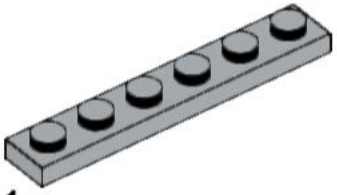

1x
3666
Light Bluish Gray

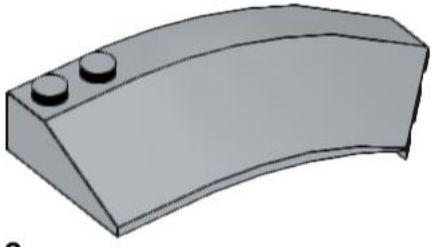

2x
41749
Light Bluish Gray

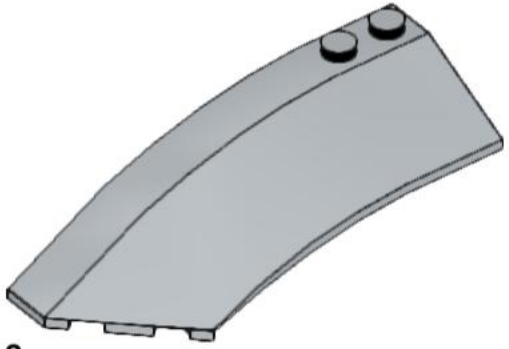

2x
41750
Light Bluish Gray



6x
3024
Reddish Brown



2x
87087
Reddish Brown




2x
11211
Reddish Brown



2x
3623
Reddish Brown



3x
3021
Reddish Brown

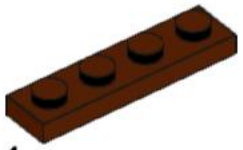


1x
3710
Reddish Brown



2x
3460
Reddish Brown



1x
60479
Reddish Brown

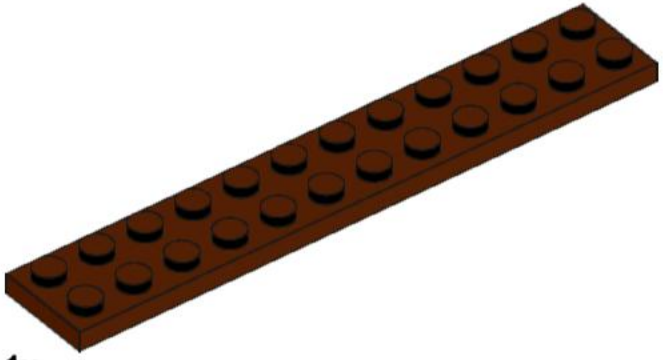


1x
2445
Reddish Brown



4x
25269
Dark Orange



2x
86996
Dark Orange



2x
29119
Dark Orange




1x
3069
Dark Orange



2x
29120
Dark Orange



2x
35480
Dark Orange



1x
3023
Dark Orange



4x
11477
Dark Orange



2x
24201
Dark Orange




2x
54200
Dark Tan




4x
3024
Dark Azure



8x
3069
Dark Azure



2x
3023
Dark Azure

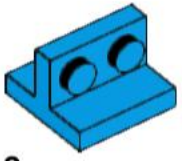

2x
41682
Dark Azure